



Before installing your new FiOS Router, you must **disconnect your old router and all connected devices**, including the Motorola NIM (if connected to your existing router). Don't forget to remove all of the router components including power supplies and all cables because they will **NOT** work with your new FiOS Router. The photos below include some examples of connected devices that must be removed before installing your new FiOS Router.

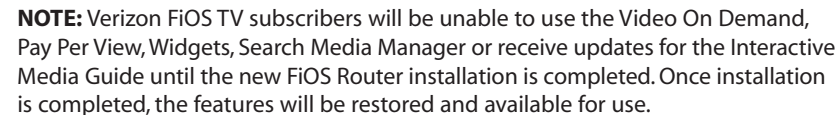


Step 5 Read and remove the **Yellow Label** on the back of the FiOS Router. Plug the **Yellow Ethernet Cable** into any of the four **Yellow Ports**.

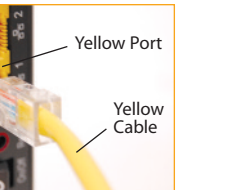

Important: Verizon FiOS TV subscribers MUST always connect a Coax cable to the Router regardless of using a WAN Ethernet connection.



Upon completing the setup instructions in Step 8, observe the Internet light located on the front of your new FiOS Router. It should turn green within 3 minutes. If the Internet light remains amber for more than 3 minutes, call Verizon FiOS customer service at 888-553-1555 to get connected. When you call, enter your phone number and follow the prompts for help with connecting your FiOS Router.

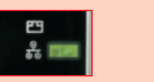


Note: If the Green checkmark under Router Status does **NOT** appear, make sure there is a solid Green WAN light (either Ethernet or Coax).



Note: If the Broadband connection is NOT connected, make sure there is a solid Green WAN light (either Ethernet or Coax) and also a solid Green Internet light on your FiOS Router.

2 Repeat these steps for each computer that you want to connect to the FiOS Router using Ethernet.

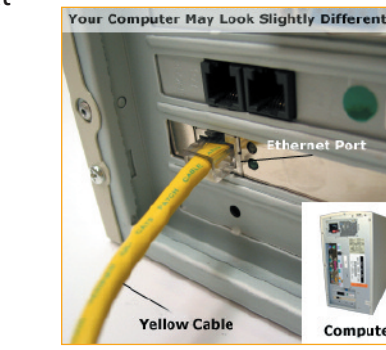

NEXT

Connect Your FiOS TV Set Top Box(es)


Step 1 Make sure all of your Set Top Box(es) are turned OFF.

Step 2 Get a Coax Cable and connect one end into a Coax Port (usually located on the wall or to a splitter) and the other end into your Set Top Box Coax Connector on your Set Top Box.



Step 3 Power up your Set Top Box.

Step 4 Make sure that the **LAN Coax light** on the front of the FiOS Router is either solid or flashing **Green**. This may take a couple of minutes.

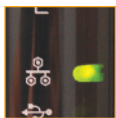

Step 5 You are connected. Your Set Top Box(es) are now supported.

Congratulations! You have successfully installed and configured your FiOS Router and created your own home or office network.

E Troubleshooting/Frequently Asked Questions

Q How do I reset the FiOS Router to the factory defaults?

A Depress the HW reset button on the back of the unit for at least 10 seconds or access the Restore Defaults reset button located in the "Advance Setup" section of the router's management GUI.

Q Do any special steps have to be taken to configure a WAN connection using either MoCA or Ethernet?

A No, the FiOS Router has an Auto Detect feature and will connect accordingly.

Q Is wireless on by default?

A Yes.

Q Is wireless security on by default?

A Yes, with a unique 64/40 bit WEP Key printed on the bottom of each FiOS Router.

Q I cannot get into the FiOS Router GUI interface. What should I do?

A Ensure the computer you are connecting to the FiOS Router is setup to dynamically receive an IP Address.

Q Are the FiOS Router Ethernet ports Auto Sensing?

A Yes, a straight through or crossover Ethernet (RJ45) cable can be used.

Q What can be done about a weak wireless signal?

A Try selecting a different Wireless channel. The FiOS Router has the capability of dynamically selecting a stable channel or you can manually select a channel. You may also want to try relocating/repositioning the FiOS Router.


Q What does the "My Network" section display?

A My Network displays LAN devices that are connected to the FiOS Router along with information about each device.



Q I've physically connected my computer to the FiOS Router, but my computer is still unable to see the FiOS Router or surf the Internet. What should I do?

A You need to make sure that the TCP/IP protocol is setup properly on this computer. To do that complete the following steps:



Step 1 For XP, from the desktop, click the **START** button (For Vista click on the Windows button) on the lower left corner. From the menu that appears, click **Control Panel**.

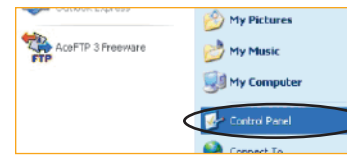


Step 2 For XP, when the "Control Panel" window appears, click **Network Connections**. For Vista click on "View Network Status and Tasks" under the "Network and Internet" icon.

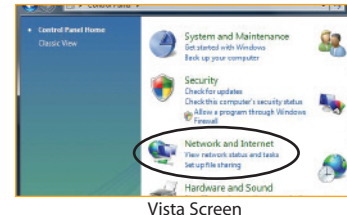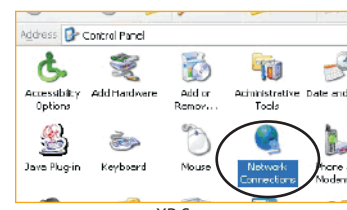


Step 3 For XP, in the "Network Connection" window, right-click **Local Area Connection** and select "Properties". A number may be displayed after the Local Area Connection is listed, locate the one that corresponds to the network card that you have connected to the FiOS Router, it should say "connected". For Vista, in the "Network Sharing" window, click on **View status** next to "Local Area Connection".

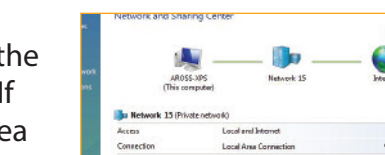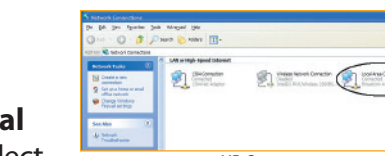


(Vista only) When the "Local Area Connection Status" window appears Click **Properties**.

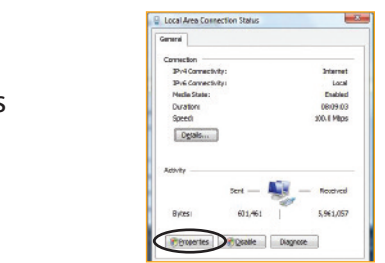

Step 4 In the "This connection uses the following item" list box, double-click **Internet Protocol (TCP/IP)**. For Vista be sure to click on **Internet Protocol Version 4**.

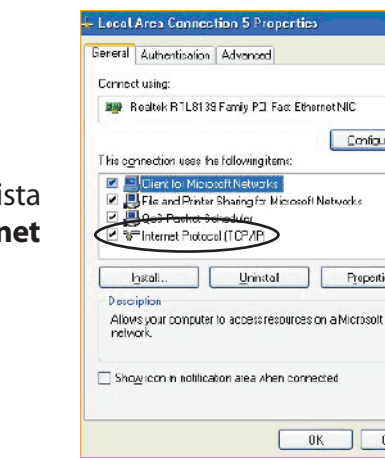

Step 5 The "Internet Protocol (TCP/IP) properties" window appears. Make sure "Obtain an IP address automatically" is selected, then click **OK** to exit. Click **OK** on the previous window to exit.

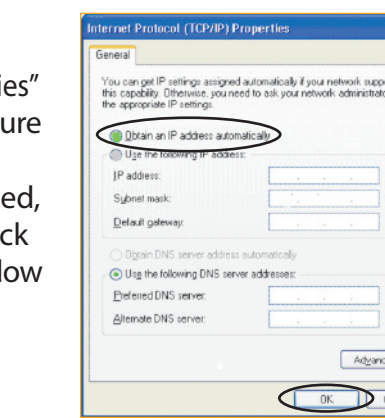

Verizon FiOS Router

MI424WR

Installation Guide

This Installation Guide will walk you through the easy steps to set up your FiOS® Router. During this process, we'll show you how to:

- A Remove Existing FiOS Equipment**
- B Connect to the FiOS Router**
- C Configure the FiOS Router**
- D Connect to Other Computers/Set Top Box**
- E Troubleshooting/Frequently Asked Questions**

